

For Advice. For Help. For Repairs: +44 (0) 1296 390 390 seriousreaders.com



The Chapel of Light, Aylesbury Road, Bierton, Bucks, HP22 5DW, Great Britain

Alex

Instructions




Serious Readers

Keep for reference

Alex Light

Getting Started

Your light is ready to plug in and use. The standby switch is located on the head of the light. If the switch has 0/1 markings, the light is not dimmable. A blank switch indicates the light is dimmable.

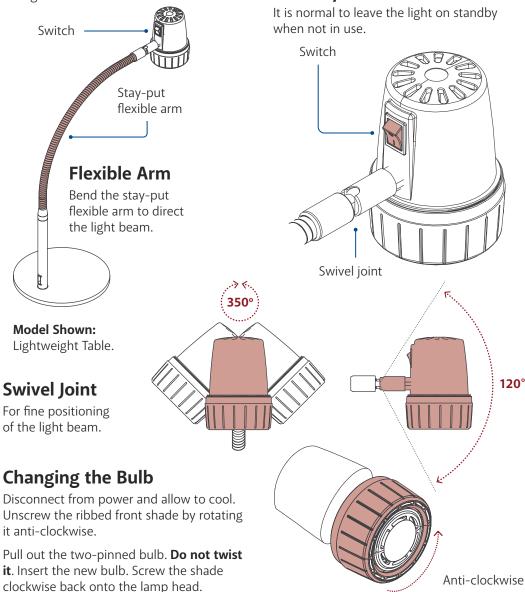

Safety

a repair. Indoor use only.

Standby Mode


Cord replacement Type X. Please contact us

if there is any cable damage. Do not attempt

Alex Light

Changing the Driver and Plug

The plug-in driver is detachable. The plug-type is also interchangeable to fit international sockets. To remove the plugtype, slide the button downwards, push the three pin plug attachment upwards to release. Click the alternative into place.

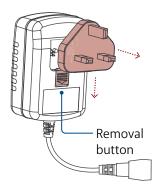

Non-Standard Models (specified at purchase)

These options are not fitted as standard. They need to be specified and paid for when a light is ordered. They cannot be retrofitted.

Height-Adjustable

Turn the locking wheel anti-clockwise to unlock the arm and tighten clockwise to lock it in position.

Dimmer

Turn the light ON by using a quick, firm click of the switch. To engage the dimmer, hold the switch down and the light will dim down and back up again. Release the switch at the desired light level. Use a guick, firm click to turn the light off.

Using the standby switch, the light will return to the same brightness level. Turning off at the mains will erase the memory and return the light to the brightest setting.

Cordless

to open

When fully charged the light will give 7.5 hours of use. There is no loss of light as the battery drains. Recharge using the Alex Charging Plug. The charging point is on the light base. While charging, a red light is visible. Once charged this turns green. A full recharge takes approximately 2 hours. The light is delivered partially charged.

